



Floor-Mounted Bath Filler Installation Manual

Tools Required

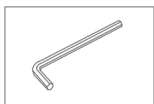

Hexagon Wrench

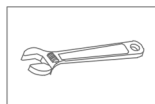

Wrench



Plumber's Tape


Notes

1. Please check that all components are present.
2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
3. Ensure water pressure is between 20-125 PSI (this includes a combination of hot and cold inlet lines).
4. Pictures in the manual are for general information and do not represent the purchased product.
5. If you plan on leaving your house vacant, please ensure to shut off the main water supply.


Daily Maintenance

1. Use a soft cloth with diluted vinegar to remove hard water stains.
2. Check the aerator for calcium build up if the water pressure is not optimum.
3. DO NOT use caustic cleaning products on the products as it will break down the finish and will void the warranty of the product.
4. Acceptable cleaners include vinegar or mild non-abrasive liquid detergents.


Installation

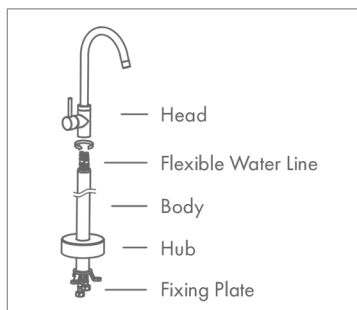


1. Diagram of the included parts.

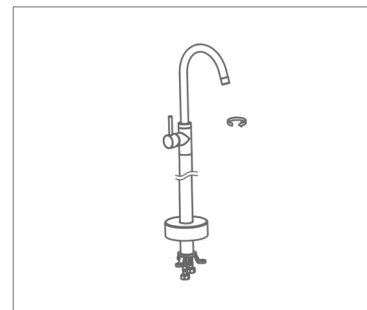


2. Insert flexible water line through the body and connect them to the head. Tight the body to the head.

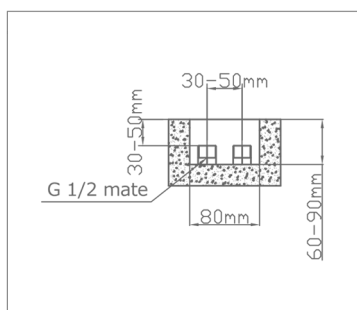


3. Ensure the water supply inlets are installed according to the diagram above..

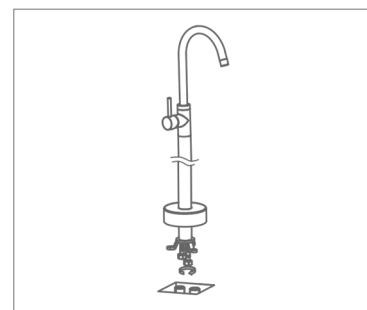

4. Slide the decorative cover onto the body. Mount the fixing plate to the body.

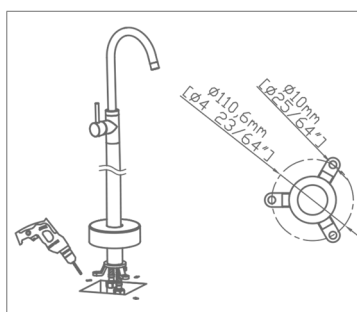

5. Connect the flexible water line to the water supply inlet. Drill holes for the fixing plate. Use included hardware to fix it to the floor.

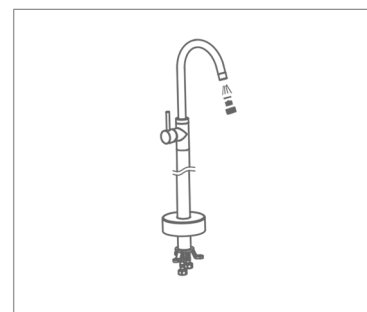

6. After installing the faucet, remove the aerator and turn the faucet on for one minute to flush the debris in the pipes. Install the aerator after flushing.